




MAMBA ROUND MARKER POST

INSTALLATION INSTRUCTIONS

PART# MAMBA-RND-M-*

Without U-Channel Support Post

1. Dig hole 18" deep by 6" wide (Fig 1).
2. Place post into ground (Fig 2).
3. Backfill dirt and tamp (Fig 3).

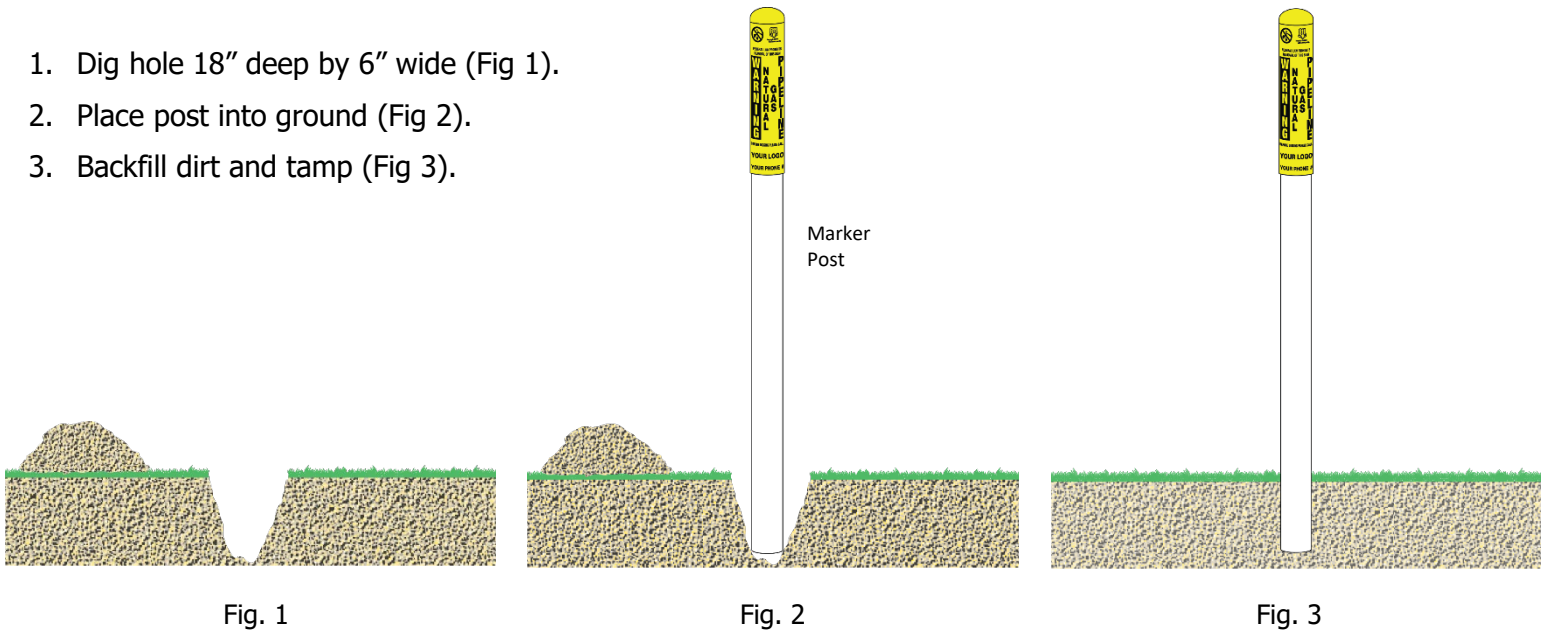

If using U-Channel Support Post

1. Place U-Channel Support Post in ground to desired height.
2. Place Marker Post over U-Channel Post to desired height. Line up 5/16" (small) hole with the U-Channel.
3. Insert Washer/Lock Nut through the 1" (larger) hole. NOTE: The 1" hole is larger to allow entry of a socket.
4. Insert hex bolt with washer through the 5/16" (small) hole and U-Channel.
5. Tighten lock nut.

