



# MAMBA TRIAD MARKER POST

## INSTALLATION INSTRUCTIONS

**PART# MAMBA-TRI-M-\***

1. Dig hole 18" deep by 6" wide (Fig 1).
2. Place post into ground (Fig 2).
3. Backfill dirt and tamp (Fig 3).

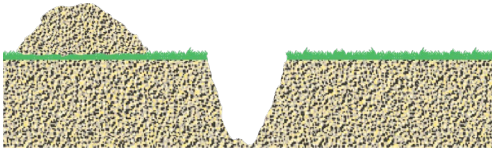


Fig. 1

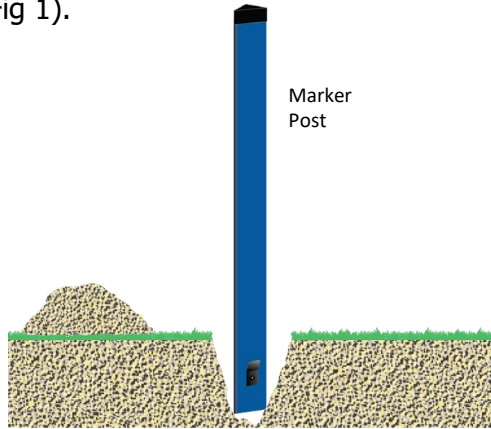


Fig. 2

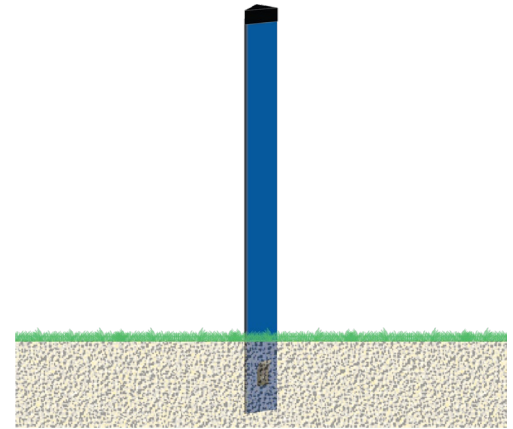


Fig. 3