




# MAINLINE-TO-SERVICE CONNECTOR

## INSTALLATION INSTRUCTIONS

**PART# 3WB-01**

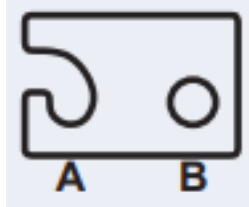

Use side A for uncut main or tap conductor.

1. Make small slit in mainline jacket without actually removing any jacketing or cutting through wire
2. Strip mainline and service tracer wires 1/8"
3. Place mainline tracer wire into open throat A
4. Tighten set screw until contact is made with wire; after contact is made, tighten set screw 1/4 turn
5. Place service tracer wire into hole B
6. Tighten set screw until contact is made with wire; after contact is made, tighten set screw 1/4 turn
7. Remove sealant cover and discard
8. Close housing, aligning conductors until housing lid is fully latched
9. Wipe excess sealant around wires

Do not reuse.

Do not pull on wires after connection is made.