




PIPE BURST MAINLINE-TO-SERVICE CONNECTOR

INSTALLATION INSTRUCTIONS

PART# SC-3WPB-C

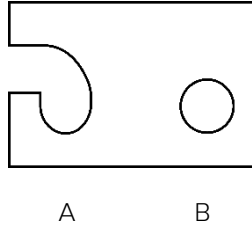

1. Strip main and service tracer wires 5/8”.
2. Place uncut stripped main tracer wire into open throat A.
3. Tighten set screw until contact is made with wire; after contact is made, tighten set screw 1/4 turn.
4. Place service tracer wire into hole B.
5. Tighten set screw until contact is made with wire; after contact is made, tighten set screw 1/4 turn.
6. Remove sealant cover and discard.
7. Close housing, aligning wires until housing lid is fully latched.
8. Wipe excess sealant around wires.

Do not reuse.

Do not pull on wires after connection is made.