



SNAKESKIN ACCESS POINT

INSTALLATION INSTRUCTIONS


PART# SNSK-*-01
(* denotes color)



Telecom Application
SNSK-N-01



Hydrant Application
SNSK-B-01

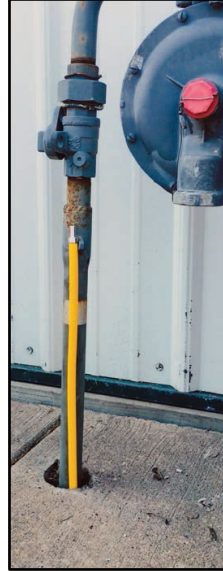

Gas Meter Application
SNSK-Y-01

Colors: B=Blue, G=Green, P=Purple, N=Orange, R=Red, Y=Yellow

Included:

- 18" Poly tube
- Aluminum cap
- 1/16" Allen wrench

Instructions:

1. Strip 5/8" of insulation from tracer wire
2. Slide poly tube over tracer wire
3. Use Allen wrench to slightly back out set screw from direct connect insert
4. Push stripped tracer wire fully into direct connect insert
5. Use Allen wrench to firmly tighten set screw onto tracer wire
6. Push direct connect insert into the poly tube
7. Secure assembled SnakeSkin onto box/hydrant/meter post with mounting band

*** Mounting band not included***